

## SDV8 Steam, Detergent & Vacuum

### Preparation



1. Detergent connection point
2. Cold water tank
3. Steam control
4. Steam hose socket
5. Vacuum hose socket
6. Vacuum tank
7. Accessory basket
8. Handle



9. On/Off switch
10. Pressure gauge
11. Temperature Display LED



12. Refill Cold Water LED
13. Steam Ready LED
14. Heater On LED



Connect handle to the back of the machine using the 4 wing nuts provided (8).



Leave the top wing nuts loose for the basket to be mounted.



Mount the basket and tighten wing nuts fully (7).



Using clean cold water fill the reservoir and replace cap (2).



If desired. Fill detergent bottle with suitable detergent.



Connect the detergent bottle to the detergent connection point (1).



Connect vacuum hose, clicking it into position (5). Ensure it cannot be pulled out.



Lift the flap and connect the hose ensuring the pin locks into position (4).



Plug the machine into a suitable socket and turn the power ON (9).



The 'Heater On LED' will illuminate (12).



In approximately 10 minutes the 'Steam Ready LED' will illuminate. Machine is now ready to be used.



The red trigger will release steam when pressed. The button will lock the steam trigger in the off position.



The left hand switch will activate the vacuum and the right hand switch for the detergent.




Affix desired accessory for cleaning task and ensure it is locked into position.



Push brake lever down to stop the machine from moving when in use.



Refill cold water when light illuminates and a beeping noise is heard.

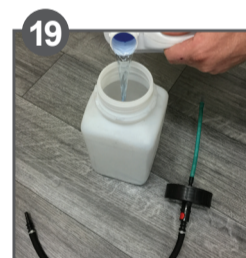

If detergent stops working, refill detergent bottle with suitable detergent.



If the vacuum stops suctioning, switch off the machine and empty the recovery tank.



21 Empty and clean before storage.

### Maintenance

## ATTENTION!

Do not use the machine before you have read and understood the operating instructions!  
Questions: 1-800-558-2332

www.TASKI.com

