

SO4 Steam Only

Preparation



1. Clean water tank
2. Steam control
3. Steam hose socket
4. Temperature Display LED



5. Heater On LED
6. On/Off switch
7. Steam Ready LED
8. Refill Cold Water LED



Using clean cold water fill the reservoir and replace cap (1).




Lift the flap and connect the hose ensuring the pin locks into position (3).

Operation



Plug the machine into a suitable socket and turn the power ON (6).

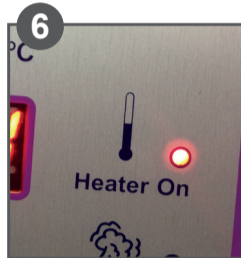

The 'Heater On LED' will illuminate (5).



In approximately 5 minutes the 'Steam Ready LED' will illuminate (7). Machine is now ready to be used.



The steam will disperse when pressed.



The steam output can be adjusted by turning the steam control (2).



Affix desired accessory for cleaning task and ensure it is locked into position.




Push brake lever down to stop the machine from moving when in use.



Refill cold water when light illuminates and a beeping noise is heard (8).

Maintenance

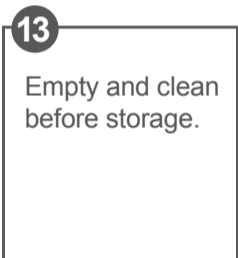

13. Empty and clean before storage.

ATTENTION!

Do not use the machine before you have read and understood the operating instructions!
Questions: 1-800-558-2332

