

Steam SO8 Steam Only

Preparation



- Clean water tank
 Steam control
- 3. Steam controlsocket



4. TemperatureDisplay LED5. Heater On LED6. On/Off switch7. Steam ReadyLED8. Refill Cold WaterLED



Using clean cold water fill the reservoir and replace cap (1).



Lift the flap and connect the hose ensuring the pin locks into position (3).



Plug the machine into a suitable socket and turn the power ON (6).



The 'Heater On LED' will illuminate (5).



In approximately 5 minutes the 'Steam Ready LED' will illuminate (7). Machine is now ready to be used.



Press the steam button on the hose handle to the "I" position.



The steam output can be adjusted by turning the steam control (2).



Affix desired accessory for cleaning task and ensure it is locked into position.



Push brake lever down to stop the machine from moving when in use.



Refill cold water when light illuminates and a beeping noise is heard (8).

Maintenance



ATTENTION!

Do not use the machine before you have read and understood the operating instructions! **Questions:** 1-800-558-2332



